

# 130mm

## Warning

- Please follow all the instructions in the manual to ensure the safety of your child. Keep this manual safe for future reference.
- Always use the safety harness and ensure that the child is positioned properly according to these instructions.
- Never leave the child unattended.

## Points To Remember

Please strictly observe below points to avoid any accidents or injury.

1. Avoid serious injury from falling or sliding out by always using safety harness which is provided with the stroller / pram.
2. Never leave your child unattended.
3. Never carry (lift) the stroller with the child in the stroller.
4. Avoid using stroller on escalators, sand beach, uneven roads and mud.
5. Do not let child stand on the stroller.
6. Never allow more than one child at a time in the stroller
7. Maximum weight load capacity of the stroller is 15kgs.
8. Never hang anything on the canopy or handle of the stroller as this may cause the stroller to become unstable.
9. Do not overload the basket. Maximum weight load capacity of the basket is below 3kgs.
10. Ensure the stroller is well assembled before using.
11. Apply the brakes when not strolling to prevent the stroller from moving by its own.
12. When using the stroller in reverse handle position, do not let the child's arm come across within the scope of handle activities.
13. Regularly check all screws, bolts and nuts.
14. Do not let your stroller near fire.
15. This stroller is designed for a child of 6-36 months of age.

## Maintenance Instructions

In order to avoid risk of any injury to your baby, please check and maintain the stroller periodically.

Regularly inspect the locking devices, breaks, wheels, harness assembly, catches, seat adjusters, joints and fixings to ensure they are secure and in full working order. If there is something wrong with any of the parts, it is advisable to get it changed.

Use a soft brush to brush off the stain and dust. You may use mild household soap to wash the tray and seat when dirty.

Follow all the instructions given in this manual carefully while assembling as well as de-assembling the stroller / pram.



Imported & Marketed By R FOR RABBIT BABY PRODUCTS PVT.LTD.  
708, 7th Floor, Pinnacle Business Park,  
Corporate Road, Prahlad Nagar, Ahmedabad, Gujarat 380015  
C: +91-79-410-57595 | W: www.rforrabbit.com | E: customercare@rforrabbit.com



## CHOCOLATE RIDE

### The Designer Stroller/Pram

## INSTRUCTION MANUAL


- EN 1888 Safety Certified Stroller
- Reversible Handle with 3 Recline Seating Position
- Front Wheel Suspension with Strong Link Brakes
- Quick Fold Mechanism
- Removable Front Tray and Cup Holder
- 5 Point Safety Harness




185mm

## Chocolate Ride

### Parts

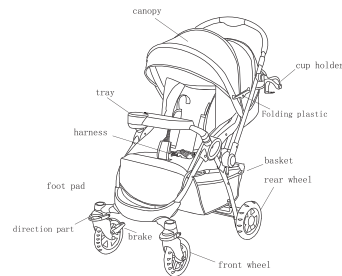

#### 1. Open the stroller

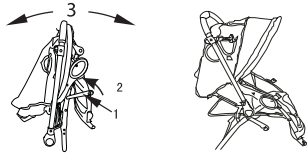


Hold the black plastic pull button on the reversible handle bar and pull it upwards to open the stroller.

#### 2. Canopy Installation




Insert the plastic corner of the canopy in the plastic hook which can be found on the stroller body, press it downward still it is fixed firmly. Simply pull the canopy to take it off.

#### 3. Food Tray Installation

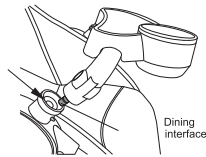


① See the picture above and insert the interface part hole firmly on both the sides to fit food tray on the stroller.  
② Press the bottom switch to take off the food tray from the stroller.

#### 4. Rear wheel installation

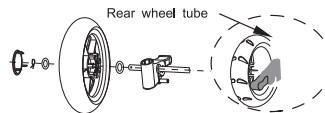


As shown in the figure, insert a visor part on the link brake shaft, then insert the rear wheel, insert another visor and lock it with the pin given. Use plastic cap to cover the rear wheel in the end. To remove the wheels, first remove the cap, then the pin to remove the rear wheel.

#### 5. Front wheel installation

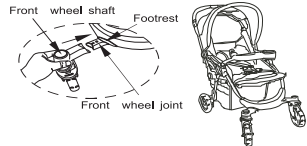

① As shown in picture above, put the front wheel shaft in the part coming out from footrest and the clip pin will be locked.  
② Press the clip pin in to remove the front wheel from stroller


#### 6. Cup holder installation and front wheel brake system

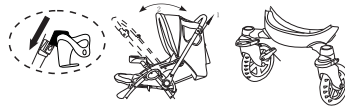

① As shown in picture above, set the cup on handle firmly.  
② Put the brakes on the front wheel to stop stroller when used with reversible handle.


## Chocolate Ride

#### 7. Front wheel directional

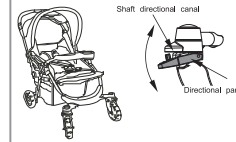


To make the pram/stroller directional, put the directional part up and clip it in the shaft. This will make the stroller directional instead of the

#### 8. Brake Set

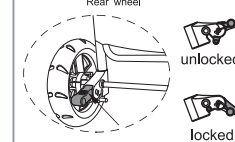


Use the link brake to lock-unlock the stroller/pram. Push the link brake downwards to lock, pull it up to unlock.

#### 9. Foot rest

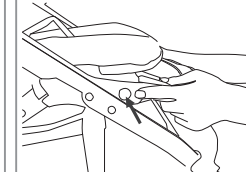


Press the two buttons on the side of the foot rest simultaneously to move it up or down

#### 10. Five Point Safety Harness

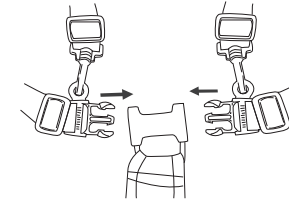


Chocolate Ride comes with five-point seat harness to protect your baby and ensure safe and comfortable strolling time. Before using the seat belt, make sure all the buckles are fixed as shown in the figure. Adjust the length of the safety belt according to baby's comfort. Place the crotch belt between baby's legs and buckle the belt. To release the safety belt, press both ends of buttons and pull out the straps from the buckle. **Warning:** Always use the crotch strap in combination with the waist belts

#### 11. Backrest adjustment

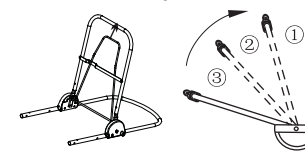

As shown in picture pull the steel support to adjust the backrest in upward or downwards position. It can be adjusted in 3 position.

#### 12. Fold the stroller

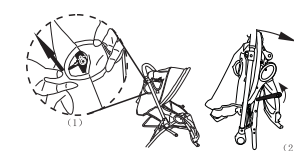

As shown in the figure, open the covers on the sides of the canopy and pull the hook inside. Push the handle forward to close the stroller. Fix the lock hook as shown in figure (2). The stroller will be in standing position when folded.

**WARNING:** Always fasten the seat belt while using to keep your baby safe.