R for Rabbit®
The Amazing Baby Company

Imported & Marketed By: R FOR RABBIT BABY PRODUCTS PVT. LTD.
307, 3rd Floor, Pinnacle Business Park, Corporate Road,Prahladnagar,
Ahmedabad, Gujarat, India-380015.
For Customer Complaints/Feedback: +91-734-834-0934 / 734-834-9340
www.rforrabbit.com customercare@rforrabbit.com
Find us on :

For Installation Video

Scan QR or Visit YouTube

Search for Product Details

R for Rabbit Lullabies Woodsy Bunny

R for Rabbit®
The Amazing Baby Company

Electric Baby Cradle



*Sketch shown is for illustrative purposes only. Actual product may vary from image.
Batteries are not included with this product.

LULLABIES WOODSY BUNNY

Gentle Auto Swings for Baby's Uninterrupted Sleep


Age Group
0-18 Months

Chair Weight Capacity
Upto 15 Kgs

Installation & User Manual

IMPORTANT - KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.
FAILURE TO OBSERVE THESE INSTRUCTIONS MAY AFFECT THE SAFETY OF YOUR CHILD!

COMPONENTS

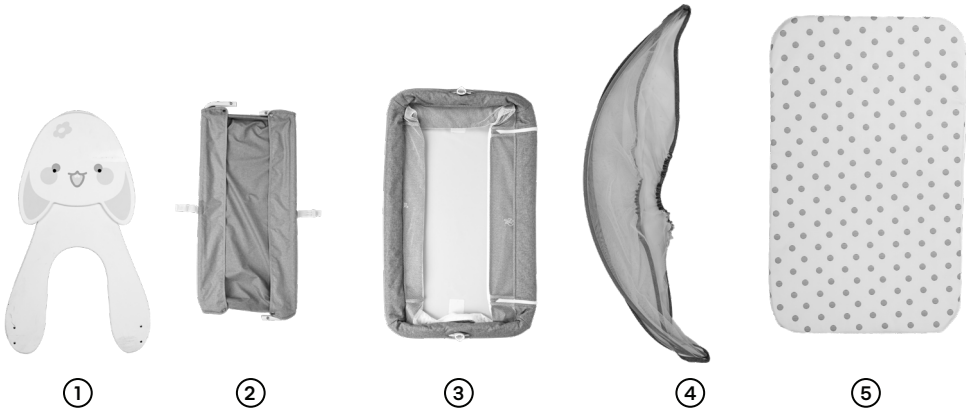

① ② ③ ④ ⑤




⑥ ⑦ ⑧ ⑨ ⑩


① Headboard X 2 nos.
② Basket frame with cover X 1 nos.
③ Bassinet frame and cover X 1 nos.
④ Mosquito Net X 1 nos.
⑤ Mattress X 1 nos.
⑥ Pillow X 1 nos.
⑦ Wheels X 4 nos.
⑧ Bolt and nut (M5 x 30) X 4nos.
⑨ Remote control X 1 nos.
⑩ USB Cable

INSTALLATION STEPS


CRADLE MODE:

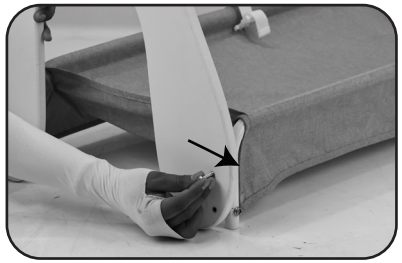


Step 1:
Use the provided M5×30 screws to secure the bottom basket to the frame. Ensure all screws are tightened firmly as shown in the reference image.

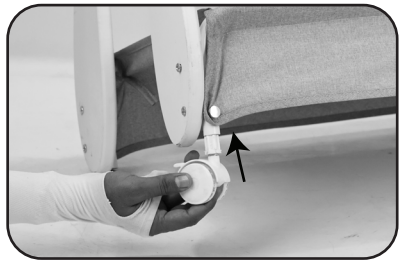


Step 2:
Insert all four wheels into the designated slots on both side frames. Press until each wheel clicks securely into place.

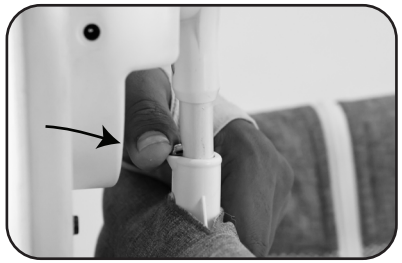


Step 3:
Turn the cradle upright and position it between the two side frames. Carefully align and insert the cradle posts into the swing arms until they are fully seated.

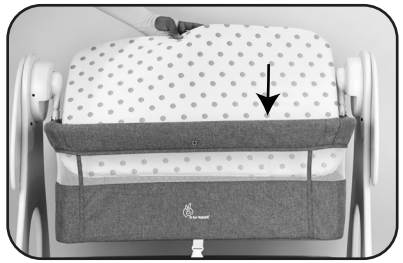

Step 4:
Lay the mattress evenly inside the cradle and place the pillow on top, ensuring both are positioned flat and secure.

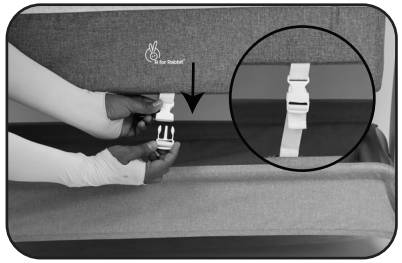

Step 5:
Before use, fasten the safety buckle located at the bottom of the cradle. Confirm that it is properly locked.

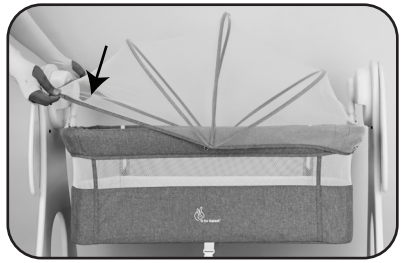

Step 6:
Attach the mosquito net to the frame as shown in the reference. Make sure it is stretched and fitted securely around the cradle.




Step 7:
Secure the basket by pressing the push buttons into place




Step 8:
Your Lullabies Woodsy Bunny cradle is now ready for use.

BEDSIDE BASSINET MODE:

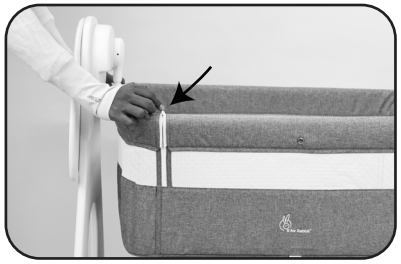

Step 1:
Unzip the side of the basket.

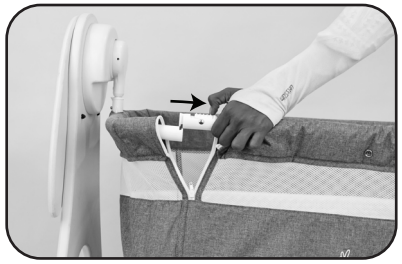


Step 2:
Slide the button and gently push the handle down.



Step 3:
Your Lullabies Woodsy Bunny Bedside Bassinet is now ready for use.

BEFORE USING THE SWING FUNCTION

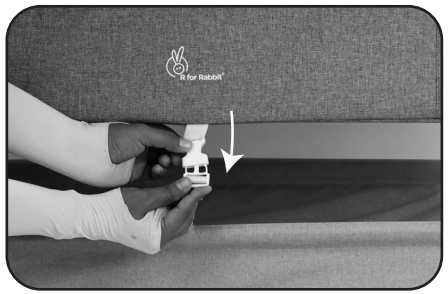


Unlock the safety buckle before operating the cradle.

WARNING:

When using the cradle in swing mode, the fixed side latches must remain open.
Failure to follow this instruction may lead to improper operation and could result in injury.

HOW TO LOCK AND UNLOCK THE WHEELS

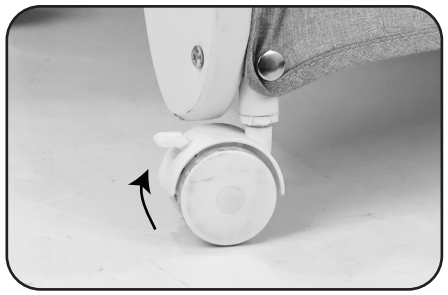


To unlock the wheels, lift the brake button.



To lock the wheels, press the brake button down until it is fully engaged.

DEVICE KEYS AND FUNCTIONS

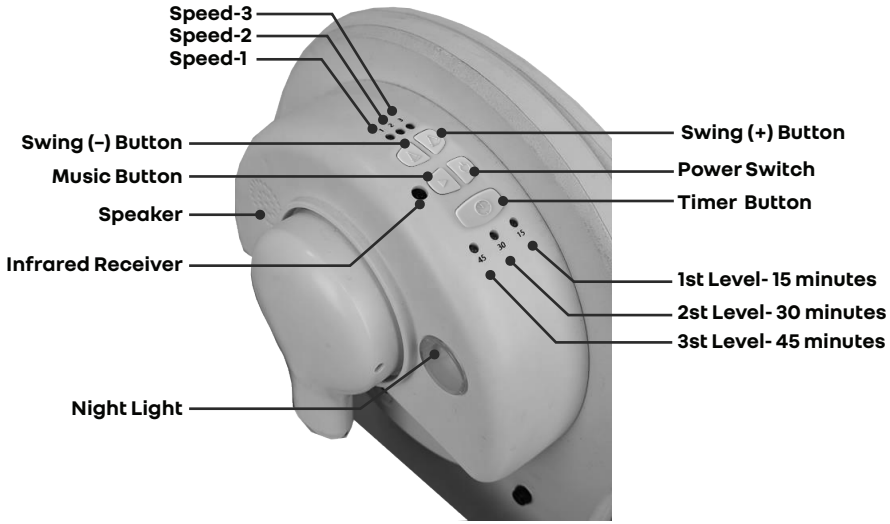

1. Power Switch

Long-press the Power Switch for 2 seconds to turn the device ON or OFF.
The device will start in Default Speed Mode: Level 2.

2. "Swing +" Button

1. Press the Swing + button to increase the swing speed. The gear indicator will shift up one level each time until it reaches 3rd speed, after which it will not increase further.
2. Long-press the Swing + button to increase the music volume.

3. "Swing –" Button

1. Press the Swing – button to decrease the swing speed.
   The indicator will reduce step-by-step until the light turns OFF (0-gear / swing stop).
2. Long-press the Swing – button to decrease the music volume.

Swing Speed Levels:

- **Speed 1**: 8–12°
- **Speed 2**: 12–16°
- **Speed 3**: 16–20°

4. Timer Button

1. Press the **Timer Button** to turn on the timer indicator.
   Continue pressing to cycle through the timer settings:
   - **1st Level:** 15 minutes
   - **2nd Level:** 30 minutes
   - **3rd Level:** 45 minutes
2. Long-press the **Timer Button** to turn the **night light ON or OFF**.

5. Music / Bluetooth Functions

(A) Music Button

1. **Short Press:**
   Tapping the **Music** button will cycle through the following sequence:
   Play → Pause → Next Song → Pause → Next Song, and so on.
2. **Long Press (2–3 seconds):**
   Long-press the Music button to enter Bluetooth Mode having device name as P15-D.
   - If Bluetooth pairing (P15-D) is **not completed within 2 minutes,** the cradle will automatically exit Bluetooth Mode and return to **local music playback**.
   - If you do **not** want to connect via Bluetooth, long-press the Music button again (2–3 seconds) to switch back to **local music.**

   Note: The device includes 10 built-in local music tracks.

(B) Indicator Lights

The device is equipped with **6 indicator lights, 1 night light,** and **1 signal receiver.**

1. Swing Gear Indicator Lights (3 total)

- Three indicator lights correspond to **Swing Speed 1, 2, and 3.**
- Zero gear (0 speed) is indicated when **all three lights are OFF.**
- Type: **3 mm plug-in red LEDs.**

2. Timer Indicator Lights (3 total):

- Three red indicator lights display the timer settings (15 min, 30 min, 45 min).
- Type: 3 mm plug-in red LEDs.

3. Night Light (1 unit)

- A soft **yellow light** that operates as an external night light.
- Type: **5 mm plug-in LED.**

4. Infrared Receiver (1 unit)

- Infrared receiving tube for remote-control signal detection.
- Type: **5 mm IR receiver.**

(C) Functional Design

1. Power-On via DC Supply:


- Connect the **DC power cable** and insert the DC plug into the product's DC port.
- The second indicator light will flash at **1 Hz** for **3 seconds**, then turn off.
- After this, the product enters **standby mode.**

2. Power-On via AA Batteries:

- When powered by 4 AA alkaline batteries, the **second indicator light does NOT flash.**
- The product enters **standby mode directly.**


POWER SUPPLY MODES (Three Options)

1. Built-in AA Battery Compartment

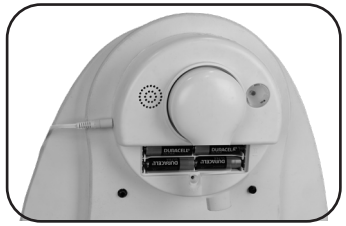

The product includes a compartment for **4 × AA alkaline batteries.**
This power option is intended for **temporary use,** such as during a power outage.

2. USB-DC Power via Mobile Charger

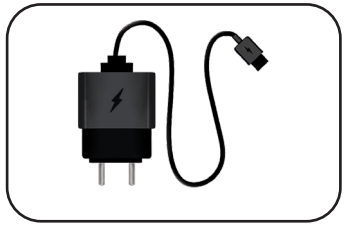


The product comes with a **USB-DC power cable.**
You can connect it to a **mobile phone charger** to supply power.

3. USB-DC Power via Power Bank



The included **USB-DC power cable** can also be connected to a **power bank** for portable power supply.

REMOTE CONTROL FUNCTIONS

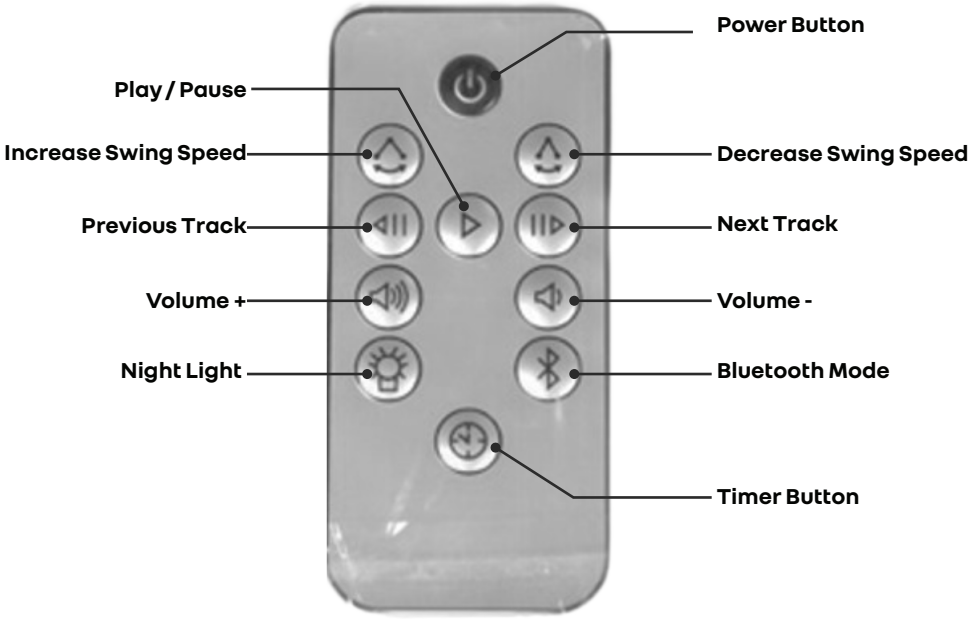

1. Power Button

Press the Power button to turn the cradle ON or OFF.
Note: The remote control itself does not require a power switch.

2. Increase Swing Speed

Press this button to increase the swing speed by one level.

3. Decrease Swing Speed

Press this button to reduce the swing speed by one level.

Swing Speed Range:

- **Speed 1:** 8–12°
- **Speed 2:** 12–16°
- **Speed 3:** 16–20°

4. Previous Track

Press this button to play the previous music track.

5. Play / Pause

Press this button to play or pause the current track.

6. Next Track

Press this button to play the next track.

7. Volume +

Press this button to increase the volume.

8. Volume –

Press this button to decrease the volume.

9. Night Light

Press the night-light button to turn the night light ON or OFF.

10. Bluetooth Button

Short-press the Bluetooth button to enter Bluetooth Mode. The cradle will appear as "P15-D" in your device's Bluetooth list

If pairing is not completed within 2 minutes, the cradle will automatically exit Bluetooth Mode and return to local music playback.

11. Timer Button

Press the Timer Button to activate the automatic swing timer.
Press repeatedly to cycle through the timer settings:

- **Level 1:** 15 minutes
- **Level 2:** 30 minutes
- **Level 3:** 45 minutes

Remote Control Battery Installation

Insert the button battery (CR2025 3V) into the remote control.
Note that the batteries are included with this product.

BATTERY INSTRUCTIONS

- Keep batteries out of childrens reach.
- Only use the recommended battery type with the correct voltage and size.
- Ensure batteries are inserted with the correct polarity.
- Remove exhausted batteries promptly.
- Rechargeable batteries should only be charged under adult supervision.
- Do not mix old and new batteries, different battery types, or different brands.Mixing may cause leakage or explosion.
- Do not dispose of batteries in fire or attempt to charge non-rechargeable batteries.
- Never charge a battery type in a charger intended for a different type.
- Discard leaking batteries immediately. Dispose of batteries properly
- Remove the batteries if the product is not in use. Batteries left inside may leak and cause damage.

SAFETY INSTRUCTIONS:

- Do not use the product if any parts are broken, torn, or missing.
- Never leave the child unattended.
- Stop using the product when the child attempts to climb out or reaches 15 kg in weight.
- Do not place the product on an elevated surface. Always use it on a flat, level floor.
- Keep the product away from open flames and strong heat sources such as electric heaters, gas fires, etc.
- Do not use the product without the seat cushion installed.
- Discontinue use if the product becomes damaged or broken.
- This product must be installed by an adult and used under adult supervision at all times.