




R for Rabbit

The Amazing Baby Company

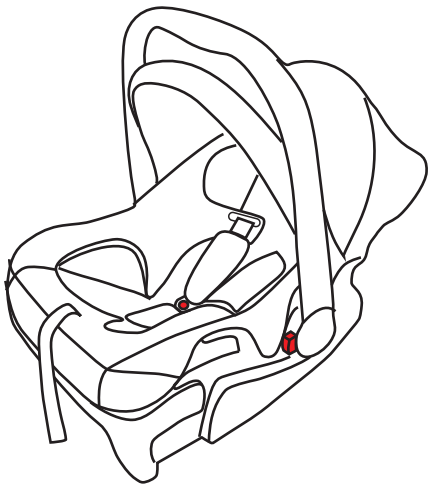

Group 0+ : 0-13 KG, Universal

Installation & User Manual

Picaboo Grand Car Seat

Notice

- 1) This is a "universal " child car seat. It is approved to Regulation No. 44 ,04 series of amendments,for general use in vehicles and it will fit most,but not all,car seats.
- 2) A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a “Universal”child car seat for this age group.
- 3)This child car seat has been classified as “Universal” under more stringent conditions than those which applied to earlier designs which do not carry this notice.
- 4) If in doubt,consult either the child car seat manufacturer or the retailer.

Only suitable use in the listed vehicles fitted with ~~lap~~ /3 point/~~static~~ /with retractor safety-belts, approved to ECE Regulation No.16 or other equivalent standards.

Do not use cars seat in seating positions when an active front airbag is installed.






Warning

For the child 's safety, Please read the instructions carefully below. Carelessness or improper operations may cause damage that should be avoided.

1. The instruction can be kept in the reserved place of the car seat within the usage period
2. Do not use this child seat in the home. It has not been designed for home use and should only be used in your car
3. Be sure that child is not left in the child car seat system unattended.
4. The child restraint system should be changed when it has been subject to violent stresses in an accident.
5. Any straps holding the car seat to the vehicle should be tight; Restraining the child should be adjusted according to the child's body, and should not be twisted.
6. Any lap strap should be worn low down, so that the pelvis is firmly engaged, shall be stressed.
7. Be sure any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.
8. The rigid items and plastic parts of a child car seat shall be so located and installed that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.
9. It is danger to make any alterations or additions to the device without the approval of the Type Approval Authority, and it is also danger in not following closely the installation instructions.
10. It is extremely dangerous to use any load bearing contact points other than those described in the instructions and marked in the child car seat.
11. The child car seat shall not be used without the cover; The seat cover should not be replaced with any other than the one recommended by the company.
12. The child should be taken out from the car seat when it is being moved or adjusted.(except adjusting the headrest)
13. The seat should be kept away from sunlight if the seat is not provided with a textile, otherwise it may be too hot for the child's skin.
14. Please do not buy the second hand safety car seat. Because you may not know the using history of the car seat. It may have been in an accident or lack some parts.


2. Name of parts

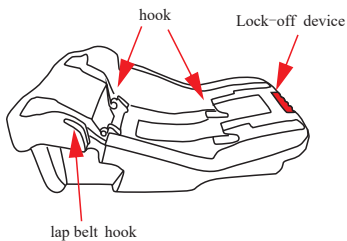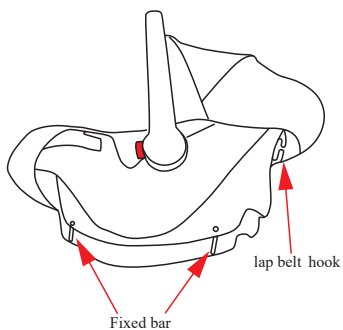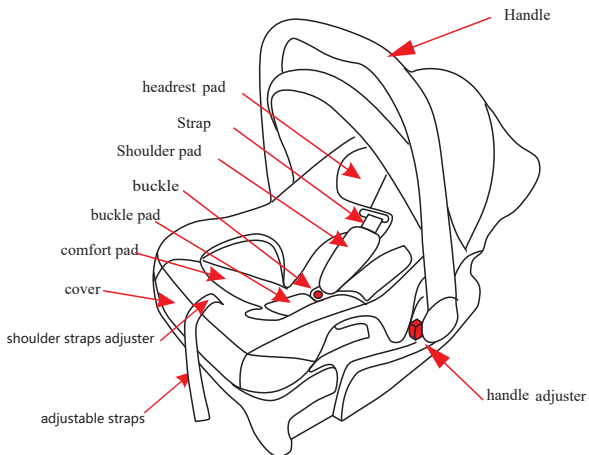


3. Installation location and adjustment of child seat

3.1 The right fitting position in the car

✓ right fitting ✗ wrong fitting

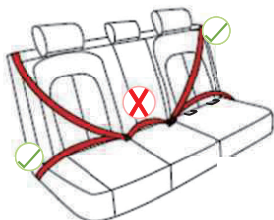

Only suitable use in the listed vehicles fitted with lap / 3 point / static / with retractor safety-belts, approved to ECE Regulation No.16 or other equivalent standards.

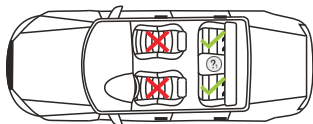


3.2 check whether the height of harness straps is correct




The child's shoulder should always be below the slot for the harness straps.(The right fitting as the picture shows.)

3.3 Adjust the height of shoulder restraint

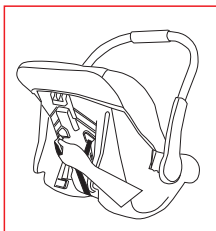

Step 1: Loosen the shoulder straps, open the buckle
 Step 2: Pull out the buckle tongues from the chest pad and slots on the cover and the shell, then thread them into the corresponding belt slots. Ensure that both of the shoulder belts go through the slots at the same height, and not twisted.

3.4 Operation of buckle

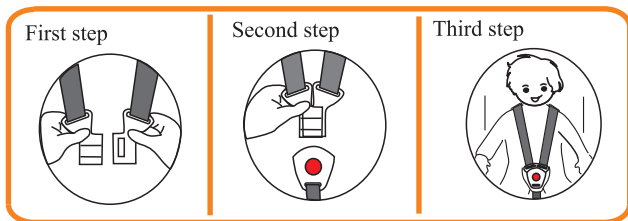


Step 1. Loosen the harness (see point above), open the buckle and place them down side ways. Seat your child in the child car seat. Place both shoulder straps over your child's shoulders.

Note: Baby below 5kg, using comfort pad and headrest pad.

Baby above 5 kg, only using headrest pad.


Step 2. Put the two metal sections of the buckle connectors together (fig. 1), Slot the two buckle connectors into the slot in the top of the buckle until they "click" into place. Check the harness is correctly locked by pulling the shoulder straps upwards.

3.5 Tighten the harness restraint

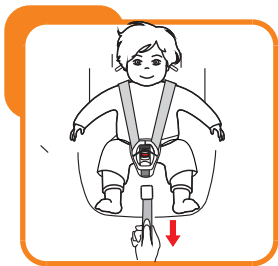


Pull the adjustment straps until the harness straps are totally tight. The shoulder restraint shall be adjusted as tightly as possible without causing discomfort to your child. Check whether the straps are adjusted tightly enough and not twisted when the child is sitting in the seat. Be sure the distance between the shoulder straps and shoulder is less than 1 cm. The lab strap shall be worn low down, so that the pelvis is firmly engaged. The loose straps are very dangerous for the child.

3.6 Loosen the harness restraint

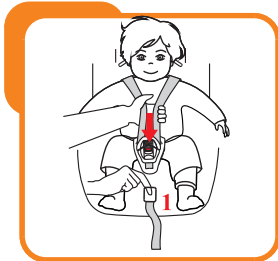


Find the right position of harness strap adjuster. (See position 1 as showed in the left picture)
Keep pressing down the harness straps adjuster by one hand, meanwhile grip two shoulder straps and pull them towards you by the other hand. With the operation mentioned above, you can loosen the harness restraint and adjust as you required.

3.7 Separation of carrier and base

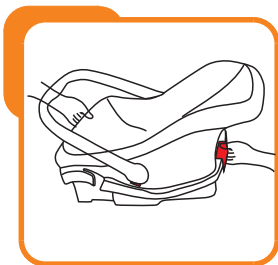

Pull the red lock-off device with one hand and the other hand takes the carrier up to separate the basket from the base.


3.8 Combination carrier and base

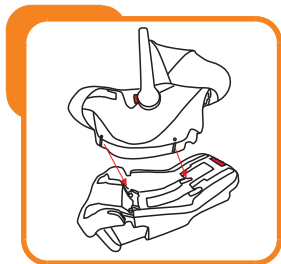


The bottom two steel rods of the carrier are aligned with the four clasps of the base and pressed down. When you hear the "click", the carrier and the base are completely combined.

3.9 Adjust the handle


Make sure all the belts position is right and they have not gone twisted. Also check that the cover is not impeding the movement or fit of the belt webbing in any way. To release your baby car seat following the above instructions in reverse order.

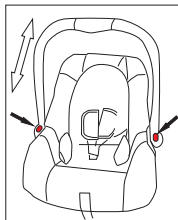

The handle for the baby car seat can be snapped into 4 stable positions. To adjust the handle, please press the red buttons of the handle on both side at the same time. Now it can be rotated.

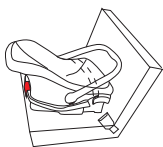

1

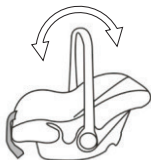

2



3



4

Position one : Rearward facing installed in the car. This position (only this position) is suitable for the baby car seat installed on the vehicle seat.

Position two : Straight up for carrying.

Position three : Handle clicked back to initiate the rocking feature.


Position four : Down to support baby for feeding and play.

Ensure that the handle is locked in a position, the harness is correctly fitted and the buckle fastened before carrying your car seat.

4. Fitting the child restraint


Please read the operating handbook in your vehicle to know about the basics concerning children's seats in vehicles. Do not place this baby seat on seats with front airbags.

This baby car seat can only be installed using a three-point vehicle belt. The baby car seat must be installed rearward facing (in the direction opposite the one in (fig 1) which you are traveling).

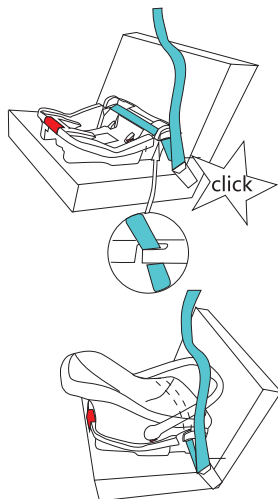


Step 1: Put the base in the car's seat. Slide the lap belt of the vehicle's 3-Point seat belt through both lap belt guides. Let the tongue plate snap in the belt lock with a clearly audible click sound. Put the shoulder belt in narrow direction to tighten the lap belt. Check to make sure the tongue plate is locked by pulling on the belt.


Step 2: Combination carrier and base following operation of 3.8.

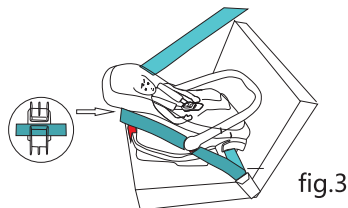

Step 3. Put the diagonal belt through the guide hook behind the child seat.

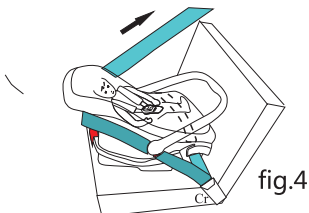


Step 4. Tighten the vehicle's own 3-point seat belt by pulling hard on the positions showed in fig. 1 and fig. 3.

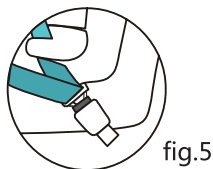

Step 5. The satisfactory position of the adult safety-belt buckle car seat relative to the child restraints is as the Fig 5. You can contact the child car seat manufacturer if in doubt about this point

Main loading point

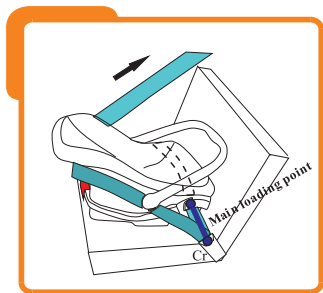

Be sure the distance between main loading and car seat must be more than 150 mm. Please contact the child restraint

5. Remove the cover

1. Release the harness, open the buckle.
2. Pull out the buckle tongues and the harness straps from the slots of the harness.
3. Take off the buckle.
4. Take off the comfort pad and headrest pad.
5. Take off the cover.

6. Daily Care and Maintenance

1. In the daily usage, you need to check the wear and tear situation of the child car seat.
2. The child car seat should be kept in a dry, ventilated and cool place when it is not used.
3. If the child seat is dirty, you can use the wet sponge to clean the Y-shaped straps, buckle or cover.
4. Washing instructions are listed as below:



Hand washing ,
below 30
degrees



do not
bleach



dry clean any
solvent except
trichloroethylene




Do not
tumble dry



Do not
iron

7. Warranty

1. The warranty period starts from the date of purchase and is valid for a period of 12 months.
2. The manufacturer is not liable for any damages other than those on products supplied.
3. The following conditions are the warranty exceptions:
 - 3.1. The device is not used in accordance with the instruction manual.
 - 3.2. Users make alterations or demolition.
 - 3.3. Use after accident.
 - 3.4. Damage due to unexpected disasters, such as fire, floods, etc.

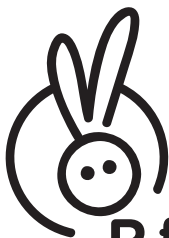

R for Rabbit

The Amazing Baby Company

R for Rabbit Baby Products Pvt. Ltd.

A1-305, Palladium, Corporate Road, Makarba, Ahmedabad,

Gujarat - 380015

+91-79-410-57595 | www.rforrabbit.com

customercare@rforrabbit.com